




neodisher[®] CM milk

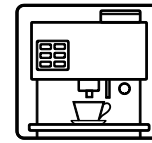

For the cleaning of milk lines in coffee machines

Liquid concentrate

Fields of application:

- Cleaning of milk foamers and milk pipes in fully automated coffee machines, coffee percolators and espresso machines

Performance spectrum:

- Reliably dissolves fat and other stubborn milk deposits
- Removes milk stains and at the same time stubborn lime deposits and dirt enclosed therein
- Effective against unpleasant odours
- Not suitable for aluminium, anodized aluminium and light metal alloys

Special properties:

- Cleans powerfully and rapidly
- Universally applicable, suitable for all coffee machines on the market
- Highly concentrated, easy dosing and handling

Application and dosage:

neodisher CM milk is suitable for cleaning all milk-carrying parts such as e.g. milk foamers and milk tubes. The instructions given by the manufacturer of the machines concerning dosage and cleaning procedure are to be observed.

All milk-carrying parts should be cleaned at least once every day.

average dosage	10 – 60 ml/l
----------------	--------------

For descaling coffee machines and other drink dispensers (such as e.g. soda fountains) we recommend using the descaler neodisher CM special.

General instructions on use:

- For professional use only.
- The neodisher CM milk-solution has to be rinsed off completely with water.
- Do not mix with other products.



Technical data:

pH-range	2.5 - 2.2 (10 - 60 ml/l, determined in deionised water, 20 °C)
viscosity	< 50 mPa s (concentrate, 20 °C)
density	1.0 g/ cm ³ (20 °C)

Ingredients:

Ingredients according to Regulation (EC) No

648/2004 on detergents:

< 5 % cationic surfactants, nonionic surfactants,

5 - 15 % phosphates

Storage information:

Always store at a temperature ranging between 0 °C and 30 °C. Changes in the colour of the product may occur when storing in factory-sealed trade units. This has no impact on the properties of the product which are relevant for application.

Hazard warnings and safety advice:

For safety information see EC Safety Data Sheets. These are available e.g. at www.drweigert.de under the category "Service".

If applied according to the instructions for use the product is safe according to the appropriate guidelines for food processing.

Dispose only when container is empty and closed. For disposal of product residues, refer to the Material Safety Data Sheet.

MB 3025/3-1

Revision date: 04/2013

Die Angaben dieses Merkblattes basieren auf unseren derzeitigen Kenntnissen und Erfahrungen. Sie befreien den Verwender nicht von eigenen Prüfungen und Versuchen. Eine rechtlich verbindliche Zusicherung bestimmter Eigenschaften kann hieraus nicht abgeleitet werden.