




neodisher® CombiDry

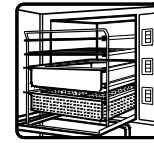

Rinse aid for convection ovens with integrated automatic cleaning system

Liquid concentrate

Fields of application:

- Rinsing of convection ovens with an integrated automated cleaning system

Performance Spectrum:

- For a rapid and streak-free drying of the interior of convection ovens.
- When used properly neodisher CombiDry is suitable for the rinsing of all standard convection ovens with an integrated automatic cleaning system.
- Before rinsing an automatic cleaning step is run for which the special cleaner neodisher CombiClean is recommended.

Special properties:

- Reliable and fast drying
- Odourless
- Highly concentrated

Application and dosage:

Observe the instructions of the manufacturers of the devices to be cleaned.

Fill neodisher CombiDry into the supply container or connect it to the dosing hose provided for the cleaning program. Rinsing is carried out automatically via the integrated cleaning system.

Notes on application:

- For professional use only!
- For an economical and controlled dosage the use of manual dosing ancillaries such as spouts is recommended. Please contact us.
- Do not mix with other products.

- Rinse out dosing system and suction hose with water before changing product.
- Storage and transport is only permitted in original packaging.

Technical data:

pH-value	1.9 (concentrate) 4,4 (0.5 ml/l, determined in deionised water, 20 °C)
viscosity	< 50 mPas (concentrate, 20 °C)
density	approx. 1.0 g/cm ³ (20 °C)

Ingredients:

Ingredients according to Regulation (EC) No 648/2004 on detergents:
< 5 % non-ionic surfactants, phosphonates

Storage information:

Always store at a temperature between 0 °C and 30 °C. Usable for 2 years when stored as recommended. For expiry date refer to the stamp mark on the label behind the hourglass symbol ⚠.

Hazard and precautionary statements:

neodisher CombiDry is not a hazardous product according to CLP Regulation (EC) No. 1272/2008.

If applied according to the instructions for use the product is safe according to the appropriate guidelines for food processing.

Dispose only when container is empty and closed. For disposal of product residues, refer to the Safety Data Sheet.

For further safety information, see safety data sheets. These are available at www.drweigert.com under the category "Service/Downloads".

MB 3018/3-4
Date of Issue: 11/2021

With the above information, to our current knowledge we describe our product regarding safety necessities, but we do not involve any quality description or promise certain properties.