

## A clean machine helps keep coffee special

With filter-coffee machines, portafilter machines and bean to cup coffee machines, the right coffee beans and high water quality are essential to a fine cup of coffee.

But what about cleaning and maintaining coffee machines?

The brewing unit, lines, containers and milk-carrying components must be cleaned regularly in order to prevent blockages and repair, maintain flavour, and avoid adverse microbiological effects.

### The neodisher® CM range



With the products in the neodisher® CM range (CM = coffee machine), Dr. Weigert offers the whole spectrum of products for hygienic cleaning of coffee machines and milk frothers, from cleaning agent to descaler. These products were developed in close cooperation with leading coffee-machine manufacturers, ensuring sophisticated solutions for your machines.



### Our cleanliness commitment

- + Outstanding cleaning performance
- + Proven and reliable formulas
- + Good solubility
- + Residue-free rinsability
- + Safe removal and breakdown of residue
- + Outstanding material compatibility
- = Impeccable coffee flavour through first-rate cleaning



### Always Nearby to Answer Your Hygiene Questions – in Europe and Around the World:

**Chemische Fabrik  
Dr. Weigert GmbH & Co. KG  
DE • Hamburg**  
info@drweigert.de  
www.drweigert.de

**Dr. Weigert (Schweiz) AG  
CH • Zug**  
info@drweigert.ch  
www.drweigert.ch

**Dr. Weigert Belgium N.V.  
BE • Kinrooi-Geistingen**  
info@drweigert.be  
www.drweigert.be

**Dr. Weigert España  
ES • Madrid**  
info.spain@drweigert.com  
www.drweigert.es

**Dr. Weigert France SAS  
FR • Villepinte**  
info@drweigert.fr  
www.drweigert.fr

**Dr. Weigert  
Handelsgesellschaft m.b.H.  
AT • Wien**  
info@drweigert.at  
www.drweigert.at

**Dr. Weigert Hungária Kft.  
HU • Budapest**  
Info@drweigert.hu  
www.drweigert.hu

**Dr. Weigert Nederland BV  
NL • Assen**  
info@drweigert.nl  
www.drweigert.nl

**Dr. Weigert Polska Sp. z o.o.  
PL • Warszawa**  
office\_pl@drweigert.com  
www.drweigert.pl

**Dr. Weigert UK Ltd  
GB • Cannock**  
enquiry@drweigert.com  
www.drweigert.uk

Dr. Weigert management system – Certified according to DIN EN ISO

**www.drweigert.com**

# The full Program

for clean coffee machines



CLEAN MASHINE – BEST COFFEE!

## neodisher® CM P

### Cleaning agent for coffee machines – powder

For regular cleaning of coffee machines and hot-drink machines. With active oxygen. Removes tannins and coffee oil reliably. Dissolves quickly.

Bucket - 10 kg - 3226 76/cans - 10 x 1 kg - 3226 82

1

**Notes on use:** Please follow the cleaning instructions of the machine manufacturer. Close the can/bucket carefully immediately after use.

Dosing: 5 015010 g/l per cleaning



## neodisher® CM L

### Cleaning agent for coffee machines – liquid concentrate

For thorough and regular cleaning of coffee machines and hot-drink machines. With active chlorine for extra-effective removal of tannins and coffee oil.

Canister - 10 l - 3227 30

2

**Notes on use:** Please follow the cleaning instructions of the machine manufacturer. Not suitable for aluminium, anodised aluminium or light alloys.

Dosing: 10 ml/l



## neodisher® CM tabs

### Cleaning agent for coffee machines and espresso machines – tablets

For regular cleaning of coffee machines and espresso machines. With active oxygen. Removes tannins and coffee oil reliably. Dissolves quickly and fully, outstanding rinsability.

Cans - 4 x 400 g - 3266 83

3

**Notes on use:** Please follow the cleaning instructions of the machine manufacturer. Close the can carefully immediately after use.

Dosing: 1 tablet per cleaning  
Weight = 2 g per tablet



## neodisher® Alka 500

### Cleaning agent for milk frothers and milk paths in coffee machines – liquid concentrate

Alkaline cleaning of milk frothers and milk paths in bean to cup coffee machines, ordinary coffee machines and espresso machines. No active chlorine.

Canister - 12 kg - 3114 30/bottles- 12 x 1 l - 3114 44

4

**Notes on use:** Please follow the cleaning instructions of the machine manufacturer. All milk-carrying components should be cleaned at least once a day.

Dosing: 30 ml/l as specified by the machine manufacturer.



## neodisher® CM milk

### Cleaning agent for milk frothers – liquid concentrate

Acidic cleaning of milk frothers and milk paths in bean to cup coffee machines, ordinary coffee machines and espresso machines. Removes milk residue reliably.

Bottles - 12 x 1 L - 3025 44

5

**Notes on use:** Please follow the cleaning instructions of the machine manufacturer. Not suitable for aluminium, anodised aluminium or light alloys. All milk-carrying components should be cleaned at least once a day.

Dosing: 10–60 ml/l



## neodisher® CM special

### Descaler for coffee machines – powder


Removes limescale and other acid-soluble deposits in coffee machines, espresso machines and water heaters.

Cans - 10 x 1 kg - 3264 82

6

**Notes on use:** Take the manufacturer's information on descaling into account when performing automatic cleaning. Not suitable for aluminium, anodised aluminium or light alloys. For descaling of water heaters: dissolve neodisher CM special in water in line with the recommended dosing stated below. Next, put the water in the water heater to be descaled, heat it to 60–70 °C and allow sufficient time for the product to act. Do not wait too long. After descaling, rinse several times with hot water.


Dosing: 100–150 g/l on average

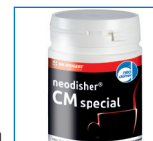

## FILTER-COFFEE MACHINE



Coffee path

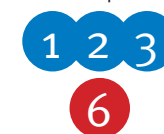

## PORTAFILTER MACHINE



Manual



Automatic



Additionally with milk system



## BEAN TO CUP COFFEE



Filter coffee



Specialties



Additionally with milk system

