




caraform[®] universal

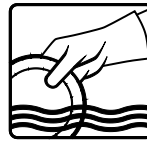

All-purpose cleaner for surfaces, equipment and tableware

Liquid concentrate

Fields of application:

- For all kinds surfaces and equipment in all food processing fields such as professional kitchens, butcher's shops and bakeries.
- Also suitable for the manual cleaning of tableware.
- Reliably removes dirt from surfaces, equipment and floors.
- Suitable for all materials such as glass, porcelain, plastic and stainless steel.
- For subsequent automated cleaning the use of the special pre-cleaning detergents neodisher prewash, neodisher preclean L und neodisher preclean P is recommended.

Special Properties:

- Universally applicable.
- Very gentle on material.
- Free of perfumes and colourants

Application and dosage:

Dilute caraform universal according to the dosing recommendations mentioned below. Apply the working solution onto the surfaces to be cleaned and allow the product to act for a few minutes. Then rinse the solved dirt particles with plenty of fresh water.

Depending on the degree of soiling	0.05–0.2%	0.5 ml/l–2.0 ml/l
------------------------------------	-----------	-------------------

General instructions on use:

- For professional use only!
- For an economical and controlled dosage the use of manual dosing ancillaries such as mixing equipment or dosing accessories is recommended. Please contact us.
- Surfaces that come into contact with food must be rinsed with drinking water after each cleaning and disinfection to remove residues.
- Do not mix with other products.

Technical data:

pH-value	Approx. 6.3–6.9 (0.5–2.0 ml/l, determined in deionised water, 20 °C)
Viscosity	< 1000 mPas (concentrate, 20 °C)
Density	1.0 g/cm ³

Ingredients:

Ingredients according to Regulation (EC)

No 648/2004 on detergents:

5–15 % non-ionic surfactants, anionic surfactants also preservation agents
(1,3,5-tris(2-hydroxyethyl)-hexahydro-1,3,5,-triazine)

Storage information:

Always store at a temperature between 0 and 30 °C.



caraform[®] universal

Hazard and precautionary statements:

For safety information see EC safety data sheets.
These are available at www.drweigert.com under the category "Download".

If applied according to the instructions for use the product is safe according to the appropriate guidelines for food processing.

Dispose only when container is empty and closed.
For disposal of product residues, refer to the Material Safety Data Sheet.

MB 3221/3-3
Date of Issue: 10/2014

With the above information, to our current knowledge we describe our product regarding safety necessities, but we do not involve any quality description or promise certain properties.
