




neodisher[®] KN

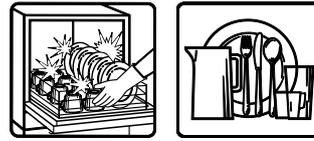

Neutral special rinse aid for dishwashers

Liquid concentrate

Fields of application:

- Automated rinsing of crockery, cutlery, containers, transport boxes, utensils, chocolate moulds and beakers/cups in all food processing areas such as professional kitchens, butcher's shops and bakeries

Performance spectrum:

- When using the correct dosing and rinsing temperature all kinds of items are evenly wetted and dry without leaving stains or streaks
- Suitable for all materials such as china/porcelain, stainless steel, aluminium and plastic
- Especially suitable for use with soft water

Special properties:

- Enables excellent drying also of difficult-to-wet items e.g. those made of plastic
- Especially suitable for items made of polycarbonate, e.g. chocolate moulds (confirmed in a pin impression method, adapted from DIN EN ISO 22088-4)
- Economical dosing (highly concentrated)

Application and dosage:

neodisher KN is dosed into the final rinse water via an automatic dosing device. The dosing amount depends on water quality, the material of the items to be washed and the rinse water temperature. The optimum dosing of neodisher KN should be adjusted when commissioning the washer.

Depending on water quality, items to be washed and rinsing temperature	0.2 - 0.5 ml/l
------------------------------------------------------------------------	----------------

neodisher KN is especially suitable for soft water. When working with hard or salty water, we recommend a special water treatment for optimum rinsing results.

Notes on application:

- For professional use only.
- Do not mix with other products.
- Rinse out dosing system including suction hose with water before changing product.
- The instructions given by the manufacturer of the dishwasher are to be observed.
- Storage and transport is only permitted in original packaging.

Technical data:

pH-range	6 - 7 (0.2 – 0.5 ml/l, determined in deionised water, 20 °C)
Viscosity	< 10 mPas (concentrate, 20 °C)
Density	approx. 1.0 g/cm ³ (20 °C)

Ingredients:

Ingredients according to Regulation (EC) No 648/2004 on detergents:
< 5 % phosphonates, non-ionic surfactants also preservatives: 1,2-benzisothiazol-3(2H)-one



Storage information:

Always store at a temperature between 0 °C and 30 °C.

Usable for 1 year when stored as recommended. For expiry date refer to the stamp mark on the label behind the hourglass symbol .

Hazard and precautionary statements:

neodisher KN is not a hazardous product according to the CLP-Regulation (EC) No 1272/2008.

If applied according to the instructions for use the product is safe according to the appropriate guidelines for food processing.

Dispose only when container is empty and closed. For disposal of product residues, refer to the Safety Data Sheet.

For safety information see safety data sheets. These are available at www.drweigert.com under the category "Service/Downloads".

MB 3216/3-3

Date of issue: 09/2021

With the above information, to our current knowledge we describe our product regarding safety necessities, but we do not involve any quality description or promise certain properties.