




# neodisher® grill

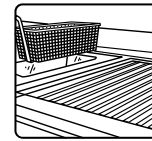

## Intensive cleaner for grills

### Liquid concentrate

#### Fields of application:

- For the manual cleaning of grills, ovens and hotplates in all food processing fields such as professional kitchens, butcher's shops and bakeries.
- Reliably removes burnt-on fat and food residues. Even removes highly charred residues from grills and frying surfaces.
- Suitable for cast iron, black sheet and stainless steel.
- Not suitable for aluminium, anodised aluminium and light metal alloys.

#### Special properties:

- Highly concentrated.
- Easy to apply on surfaces.
- Easy to rinse off.

#### Application and dosage:

Observe the instructions for use of the devices to be cleaned.

Depending on the respective degree of contamination apply the concentrate or the working solution on the surfaces to be cleaned.

The maximum temperature of the surfaces should not exceed 70 °C. Higher temperatures must be avoided, in particular with stainless steel surfaces; otherwise colourations might occur.

After an action time of max. 5 minutes (with stainless steel max. 1 min.) thoroughly rinse the solved dirt particles with fresh water.

Repeat the cleaning process with stubborn soilings respectively support the cleaning process mechanically, e.g. by scrubbing.

light soilings	10.0%	100 ml/l
highly burnt-on soilings	concentrate	

#### General instructions on use:

- For professional use only!
- For an economic and controlled dosage the use of manual dosing ancillaries such as sprayers or can pumps is recommended. Please contact us.
- Surfaces that come into contact with food must be rinsed with drinking water after each cleaning and disinfection to remove residues.
- Do not mix with other products.

#### Technical data:

pH-value	approx. 13.9 (10 ml/l) (determined in deionised water, 20 °C)
viscosity	< 50 mPas (concentrate, 20 °C)
density	1.3 g/cm <sup>3</sup> (bei 20 °C)

#### Ingredients:

Ingredients according to Regulation (EC) No 648/2004 on detergents:

< 5 % phosphates, amphoteric surfactants

#### Storage information:

Always store at a temperature between 0 and 30 °C.



# neodisher<sup>®</sup> grill

## Hazard and precautionary statements:

For safety information see EC safety data sheets. These are available at [www.drweigert.com](http://www.drweigert.com) under the category "Download".

If applied according to the instructions for use the product is safe according to the appropriate guidelines for food processing.

Dispose only when container is empty and closed. For disposal of product residues, refer to the Material Safety Data Sheet.

MB 3239/3-2  
Date of Issue: 10/2014



With the above information, to our current knowledge we describe our product regarding safety necessities, but we do not involve any quality description or promise certain properties.